

# Slim Wall Pack

Tunable Slim Wall Pack Light



## Description

This slim wall pack light looks modern and refined with the same high performance. The tunable CCT options and built in photocell keeps it user-friendly and easy to use!

## Features


- Dust and water resistant
- CCT 3/4/5 kelvin tunable
- Built in selectable photocell
- DLC Premium approved
- Durable aluminum housing
- Tunable wattage options

Specifications	60w	80w
Watts (Selectable)	30/40/60w	80/100/120w
Voltage	120-347 VAC	
Kelvin (Selectable)	3000/4000/5000k	
Efficacy	130 LPW	
Lumens	3900/5200/7800	10400/13000/15600
CRI	80+	
Operating Temp	-40°C to 45°C	
Beam Angle	120°	
Mounting	Backplate	
Controls	Photocell/Tunable/Dimmable	
Approx Lifespan	50,000 hrs	




Technical Specifications and Certifications Provided by the Manufacturer


## Polar Candela

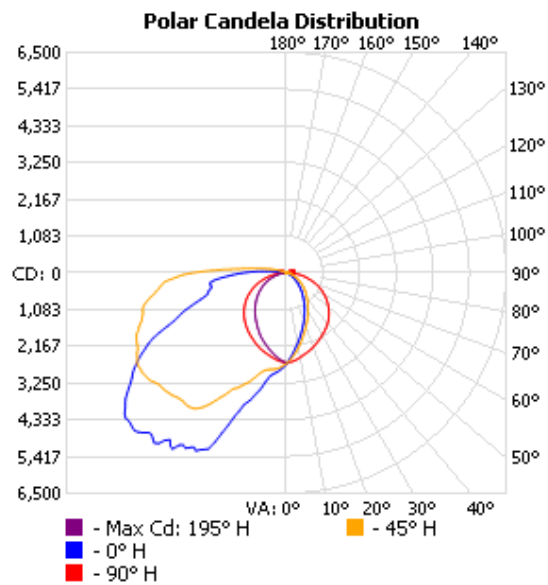

Selectable photocell,  
wattage and CCT

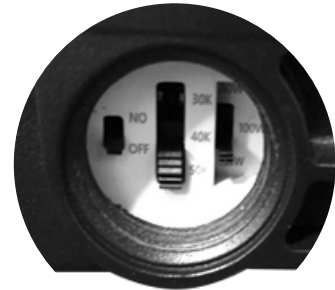


## Dimensions

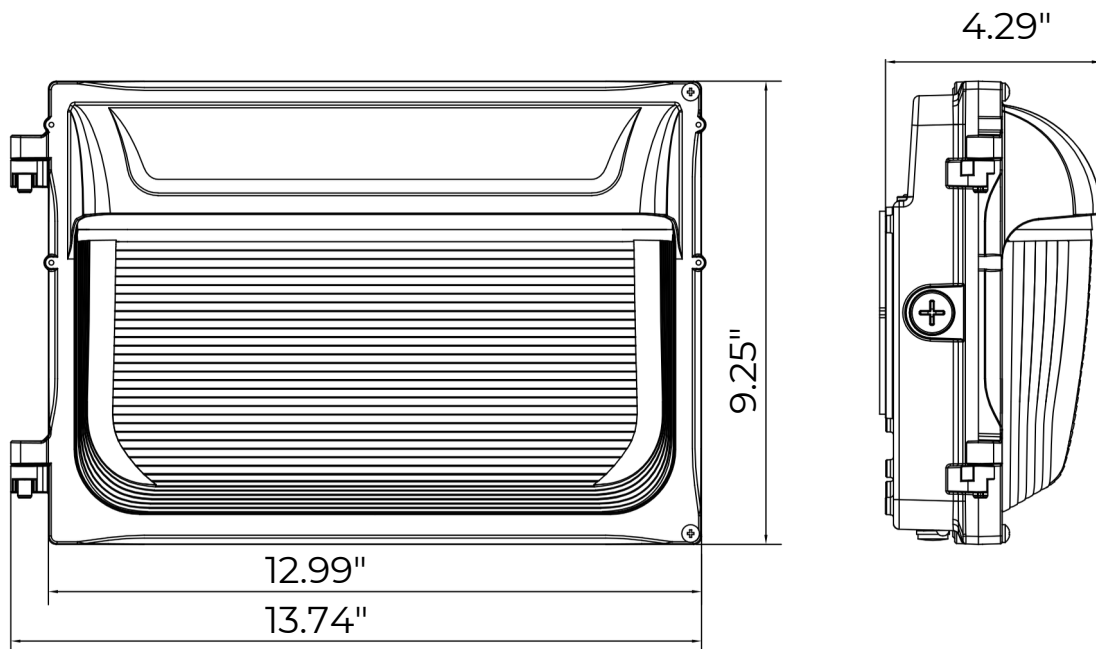


## Installation


1. Unscrew the larger tooth plug on the side of the lamp, use a Phillips screwdriver.

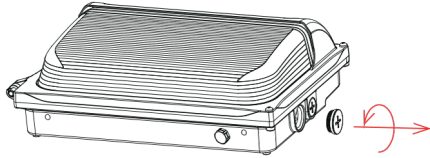


3. Attach the larger tooth plug to the light fixture, use a Phillips screwdriver.

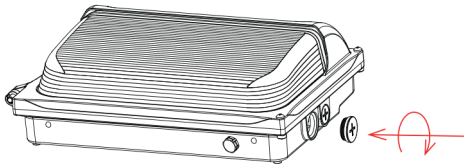


2. Adjust the power, color temperature, and light-sensing switches to the appropriate gear as needed. If the purchased lamps do not have color temperature optional or photocell sensor function, the color temperature optional or photocell sensor gear is empty.

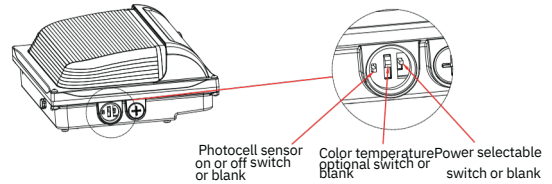


4. Use a screw driver to unscrew the lamp screws and remove the upper half of the fixture.

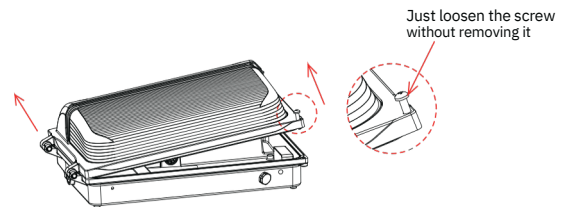


5. Unscrew the cover of the entry hole on the lamp base and remove the cover.

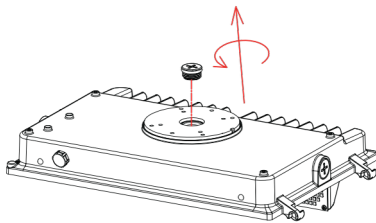


6. According to the embedded terminal box, punch the corresponding mounting hole on the light's mount.

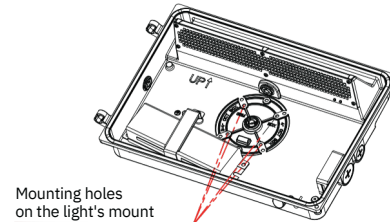


7. Put the input line in the embedded box passes through the waterproof pad and then passed through the lamp base.

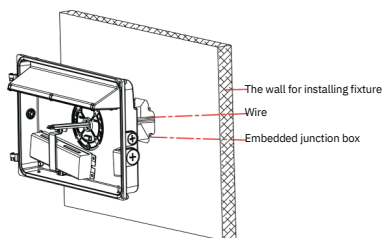


8. Use screw to lock the lamp base on the embedded junction box, and ensure the balance of the horizontal column.

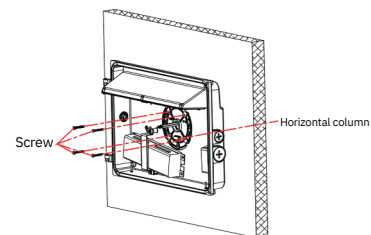


9. Connect the input wire and the dimming wire of the light, then put the connected wires into the embedded terminal box.

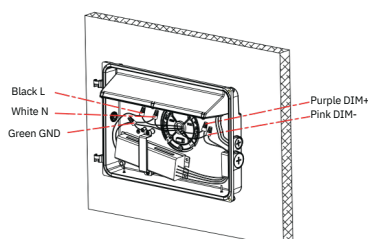

10. Turn the power or color temperature switch to the required position, and pull out the rubber plug at the water leakage hole.

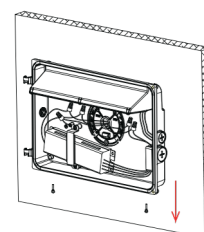

11. Insert the rotating shaft of the upper cover into the rotating shaft hole of the bottom shell.

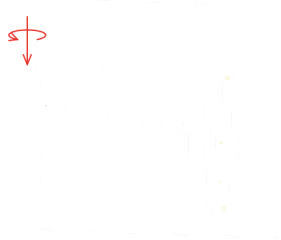

12. Lock the upper cover screws into the bottom shell with a cross screwdriver.



13. Fill the gap between the lamp and the wall with silicone sealant to prevent rainwater from entering the junction box.

